

Manuale d'uso - Efficienza Energetica / User Manual - Energy Efficiency / Manuel de l'utilisateur - L'efficacité énergétique / Handbuch - Energieeffizienz / Handboek - Energie-efficiëntie Manual - Eficiencia Energética / Manual - Eficiência Energética / Manuell - Energieeffektivitet / Manuell - Energieeffektivitet / Manuaalinen - Energy Efficiency / Manual - Energieeffektivitet Руководство - Энергоэффективность / Käsiiraamat - Energiatõhususe / Rokasgrāmata - Energoefektivitātes

Table with 13 columns: Model (S, M), Brand (PF), Power (IT), Efficiency (AEC, EEC, FDE, FDEhood, LE, LEC, GFE, GFEC, Qmin, Qmax, Qboost, SPemin, SPEmax, SPEboost, PO, Ps, PI), Energy consumption (IT), Additional info (Additional information according to 66/2014), Performance (Qbep, Qmax, Wbep, Wl, Emiddle, Lwa), Noise (Wbep, Wl, Emiddle, Lwa), and Certifications (Norme di riferimento, Normative references, Normes de référence, Referenznormen, Referentienormen, Normas de referencia, Normas de referência, Referensstandarder, Referensstandarder, Viltenormi, Referenstandarder, Normativas documentos, Normativitvities). Rows include Faber PF1661, AEChood, EEC, FDE, FDEhood, LE, LEC, GFE, GFEC, Qmin, Qmax, Qboost, SPemin, SPEmax, SPEboost, PO, Ps, PI, f, EEIhood, Qbep, Pbp, Qmax, Wbep, Wl, Emiddle, Lwa, CONSIGLI PER IL RISPARMIO ENERGETICO, and CONSIGLI PER L'ECONOMIA D'ENERGIA.

